



PRO-14b

4 CHANNEL CAPACITOR DISCHARGE IGNITION

PLEASE REPORT ANY ERRORS
SALES@MWIGNITIONS.COM

CONTENTS:

1. Installation notes
2. Ignition coil information
3. Mounting dimensions
4. Connections and specifications
5. 4 coil two trigger ignition
6. 4 coil direct fire ignition
7. Porsche twin plug head
8. Australian EMC requirements

CAUTION

**THIS WIRING DIAGRAM IS
APPLICABLE ONLY TO IGNITION
SYSTEMS WITH THE SERIAL
NUMBER PREFIX STARTING**

51xxxx

**USE OF INCORRECT DIAGRAM
WILL VOID WARRANTY AND
MAY DAMAGE UNIT**

INSTALLATION NOTES

MOUNTING

Do not mount the unit where it will be exposed to water or other liquids and ensure the bottom drain slots are unobstructed. Select a location away from excessive heat and provide a cooling air supply if required. Use soft rubber (40 duro) mounts on all four corners to isolate from strong vibration.

IGNITION LEADS & SPARKPLUGS

Straight metal wire ignition leads radiate electrical interference which may cause erratic operation of nearby electronic devices including the CDI. Carbon suppressed ignition leads are not capable of conducting the CDI energy without becoming damaged.

For best performance use spiral wound inductively suppressed metal core ignition leads such as those produced by Magnecor[®]. Where possible use non resistor spark plugs to reduce energy loss.

WIRING & POWER SUPPLY

FAILURE TO INSTALL THE RECOMMENDED SIZE FUSE WILL VOID WARRANTY

Trigger input & coil output numbers indicate ignition sequence not cylinder number.

250mJ and larger Pro-Drag CDI systems must not be operated below 13V.

Voltage boosters may limit CDI operation and ignition performance will not increase when operated above 13.8V

Connect the CDI directly to the battery with the recommended gauge wire. All coil negative wires must be joined at or in the connector.

Use twisted pair wire for all power and coil connections. To comply with Australian EMC 'C Tick' standards and for ultimate noise suppression use shielded twisted pair wire.

TRIGGERING

All M&W CDI systems defaults to falling edge ignition, to select rising edge ignition connect the 'Trigger Edge' pin to the 'Signal Ground' pin. Where the ecu contains an in built igniter or there is an igniter between the ECU and CDI it may be necessary to select rising edge ignition. **The trigger edge on the CDI must be set the same as that in the ECU!**

For Autronic® multiplex ignitions set the ecu for –VE Edge (Pulse).

DWELL

M&W CDI systems are 'edge' triggered which means they are not affected by changes in dwell time. If your ecu requires a dwell time be set then use something small such as 0.5-1mS.

LED INDICATOR

After initially applying power to the CDI the LED will illuminate for 1 second then extinguish. The LED will then flash briefly with each consecutive trigger event received.

A repeated double flash of the LED indicates a possible faulty ignition coil, faulty wiring, low supply voltage or damage to the CDI.

TESTING

The CDI may be tested by momentarily grounding the inputs (with the exception of Reluctor trigger cdi's), this will cause the corresponding ignition coil to spark. Do not conduct this test without a grounded sparkplug installed. A comprehensive test procedure document may be found on our web site

http://www.mwignitions.com/pg_data_sheets.php

CAUTION

TO PREVENT IGNITION COIL DAMAGE DO NOT
FIRE THE CDI WITH AN EXCESSIVE SPARK GAP!

CHECK IGNITION TIMING AFTER COMPLETION

IGNITION COILS

COIL SELECTION

Most inductive ignition coils will work with CDI systems however for ultimate ignition energy use a coil specifically designed for CDI applications.

COP COILS

COP (coil on plug) coils with inbuilt drivers are not suitable for use with CDI ignition. Small COP coils designed for inductive ignition may overheat when used in cdi applications.

COP coils must be used with resistive spark plugs.

FERRITE CDI COILS

Be aware when buying ferrite CDI coils from other suppliers who do not have the knowledge or experience to correctly prepare them for automotive use. Due to their fragile nature and poor quality control during manufacture it is easy to experience premature ignition coil failure and engine misfiring unless correctly assembled. All coils prepared by M&W are individually tested before sale.


Note! Ferrite CDI coils are for direct fire ignition only. For high performance distributor applications use a coil similar to a Crane[®] PS92 or MSD[®] HVC2 coils.

COIL POLARITY

For correct operation inductive ignition coils should be wired with their primary connections reversed to maintain correct spark plug polarity.

CAUTION!

IGNITION COIL DAMAGE MAY OCCUR IF OPERATED WITH AN EXCESSIVE SPARK GAP.

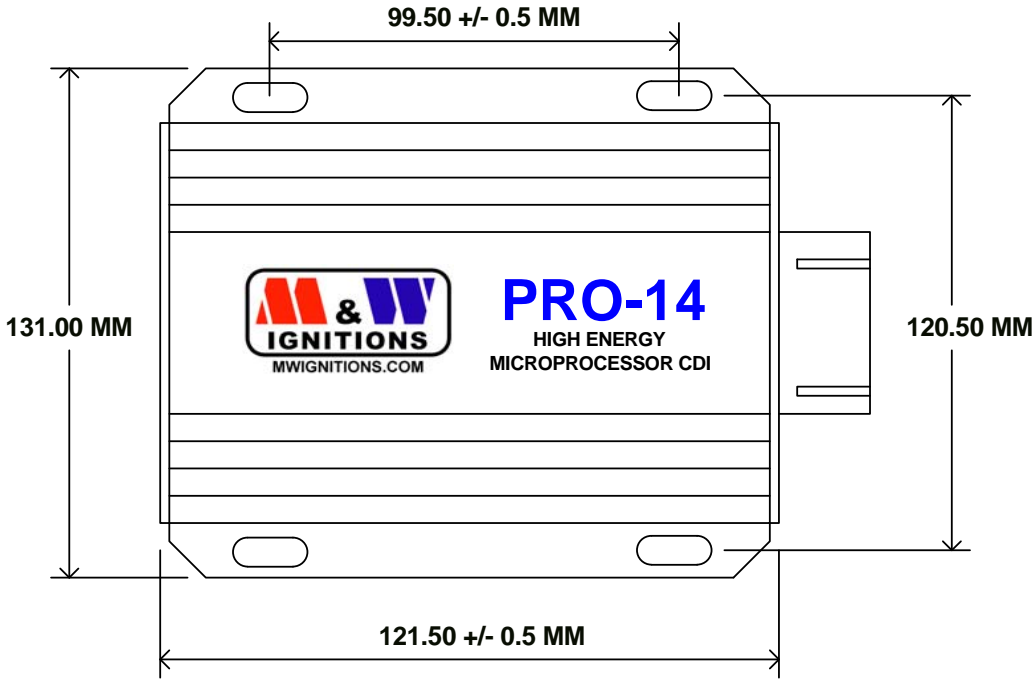

PRO-14
HIGH ENERGY
MICROPROCESSOR CDI

Slot dimensions - 5mm * 10mm

Title		MOUNTING DIMENSIONS	
Size	Number	Revision	
A4	SERIES 3	1.2	
Date:	12-Sep-2010	Sheet 1 of	1
File:	D:\M&W\Pro-14b mounting dimensions\Drawn By: M&W		



DISCONNECT POWER BEFORE WORKING ON UNIT

VIEWED FROM BACK OF CONNECTOR



TRIGGER EDGE SELECTION

Falling edge ignition - leave pin #9 disconnected.
 Rising edge ignition - connect pin #9 to pin #10.
 When triggering this unit of an existing ignition module or an ecu with built in igniters such as the Microtech 'MTX' series it may be necessary to select rising edge trigger.

SPECIFICATIONS

Supply voltage = 13.8V DC negative ground
 Operating voltage = +5.5V to +15V
 Maximum supply current = 6.0A
 Power off current < 700uA
 Maximum ignition frequency = 1,000 Hz
 Coil primary voltage = 460V
 Spark energy = 115 millijoules per coil
 Trigger = 10mA adjustable edge
 Tacho = 12V, 25mA square wave
 Maximum allowable case temperature = 105°C
 Dimensions = 130L * 130W * 40H
 Weight = 870gm

KEEP ALL INPUTS WELL SEPARATED FROM COIL OUTPUTS

1 +12V (Battery)	7 Ground (Battery)	13 Trigger D
2 +12V (Battery)	8 Ground (Battery)	14 Trigger B
3 Trigger C	9 Trigger edge	15 Trigger A
4 Tacho	10 Signal ground	16 Ignition switch
5 Coil C +	11 Coil B +	17 Coil C & D -
6 Coil A +	12 Coil D +	18 Coil A & B -


Title			FOUR CHANNEL CDI IGNITION		
Size	Number	Revision			
A4	PRO-14b S3			1.2	
Date:	12-Sep-2010	Sheet 1 of 1			
File:	D:\M&W\...\Pro14b_S3_1.sch	Drawn By:		M&W	

M & W IGNITIONS

Performance & Quality since 1996



DISCONNECT POWER BEFORE WORKING ON UNIT

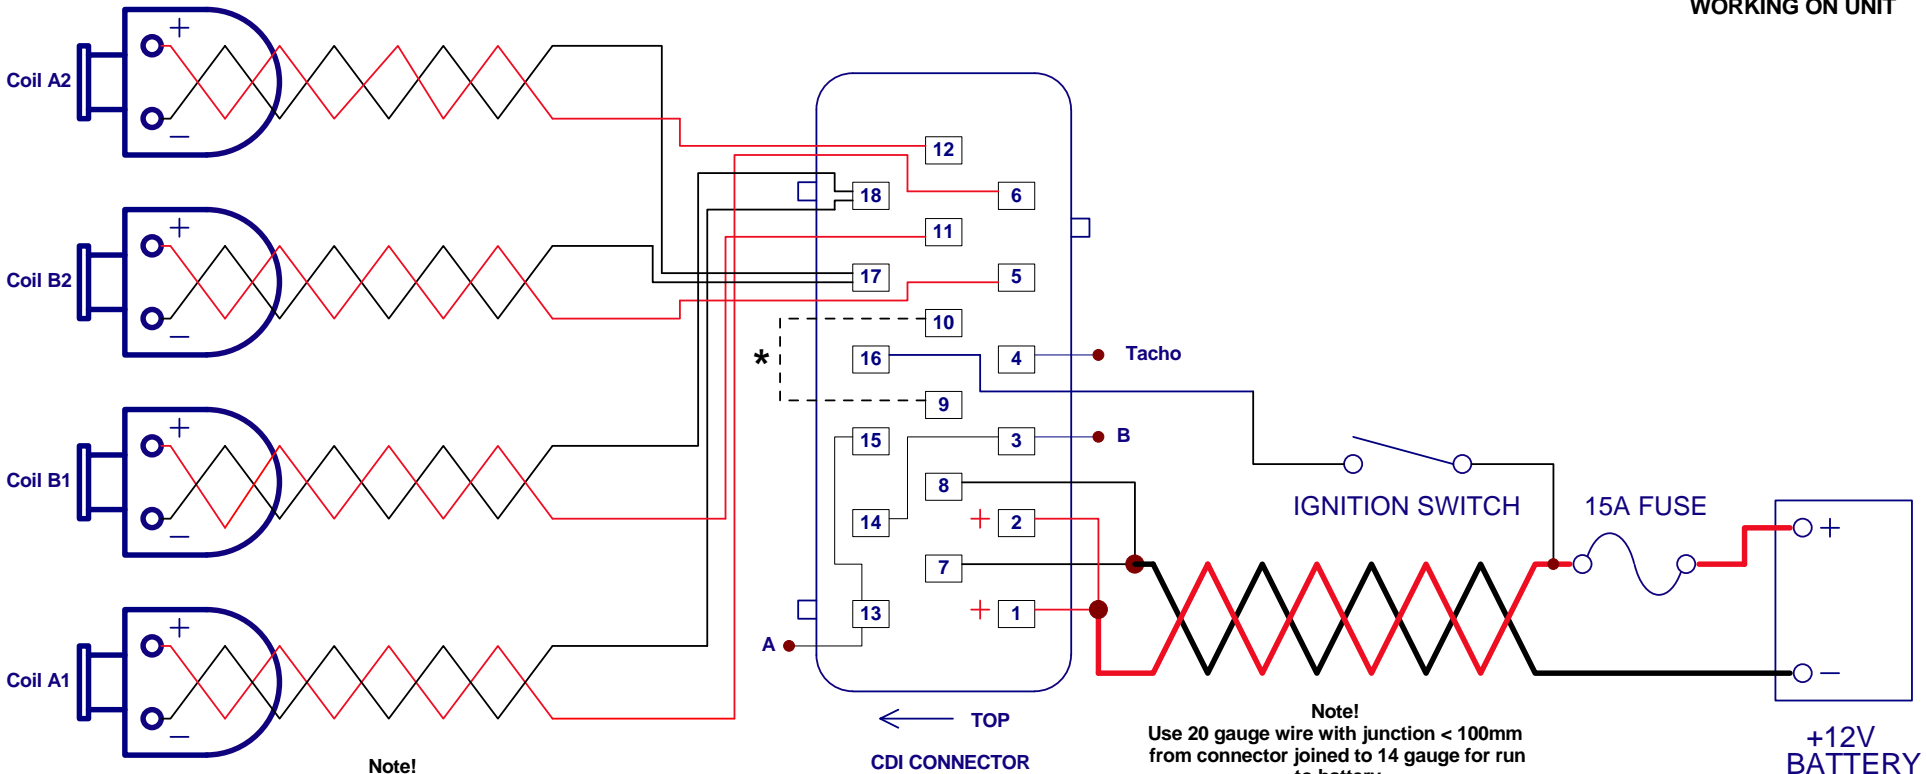

Note!
Use 18-20 gauge wire
Twist wires 1 turn in 20mm
Maximum wire length 2M

Note!
Use 20 gauge wire with junction < 100mm
from connector joined to 14 gauge for run
to battery
Twist wires 1 turn in 20mm
Maximum length 2.5M

* See specifications for use of trigger edge selection link


Title		FOUR COIL TWO TRIGGER IGNITION	
Size	Number	Revision	
A4	PRO-14b S3	1.2	
Date:	12-Sep-2010	Sheet 1 of 1	
File:	D:\M&W\...\Pro14b_S3_2.sch	Drawn By:	M&W

M & W IGNITIONS

Performance & Quality since 1996

CAUTION!
HIGH VOLTAGE

DISCONNECT POWER BEFORE WORKING ON UNIT

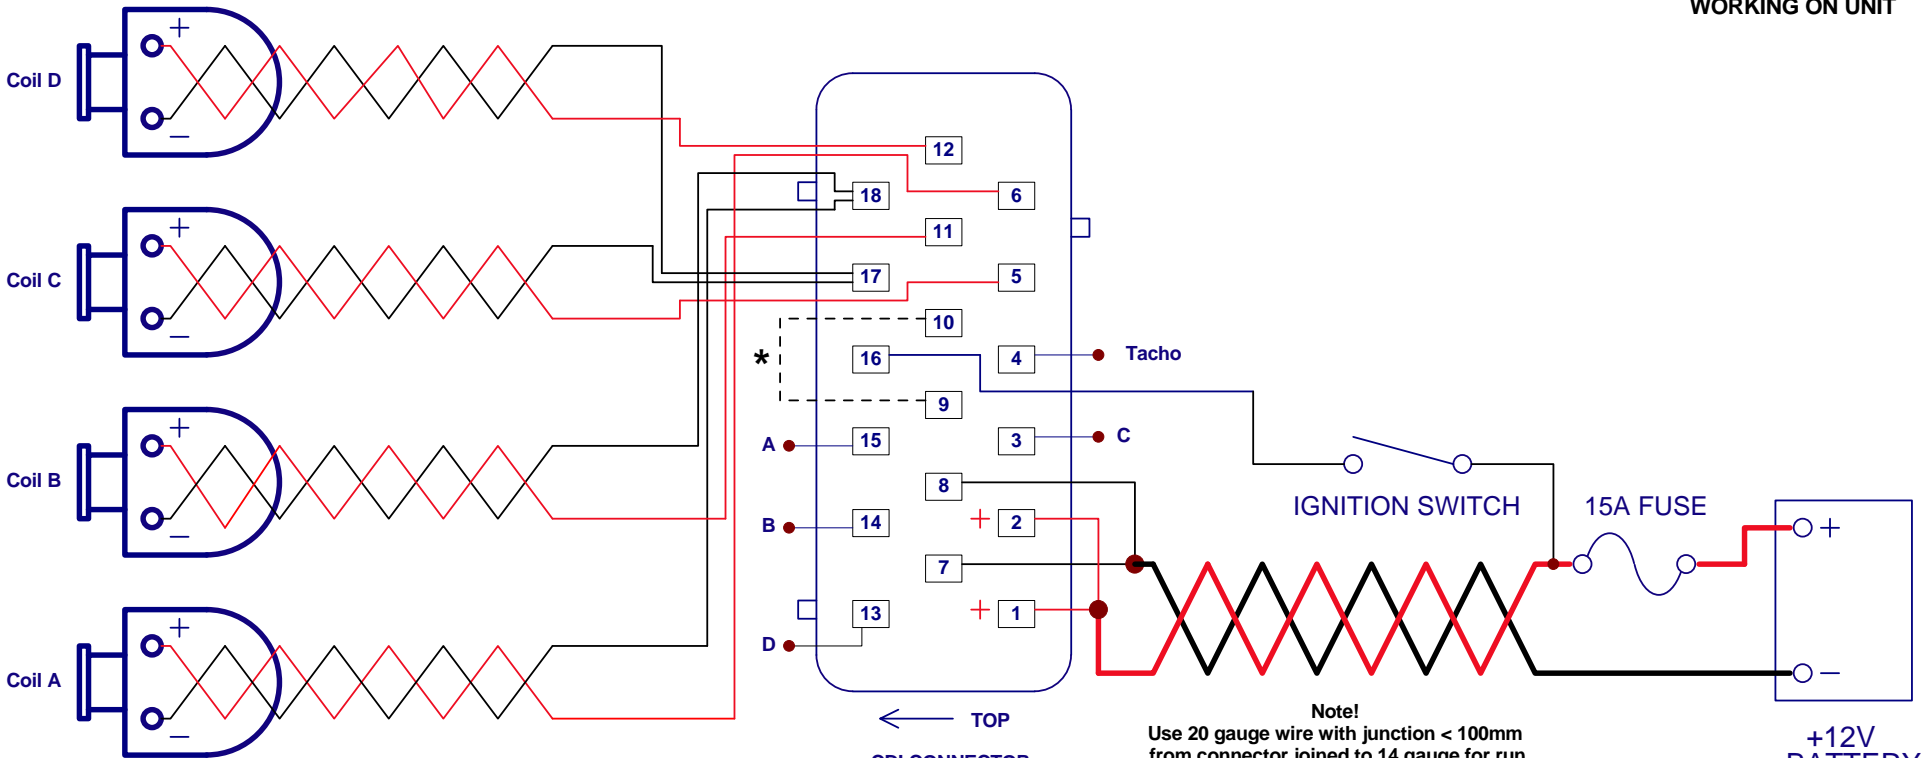

Note!
Use 18-20 gauge wire
Twist wires 1 turn in 20mm
Maximum wire length 2M

Note!
Use 20 gauge wire with junction < 100mm
from connector joined to 14 gauge for run
to battery
Twist wires 1 turn in 20mm
Maximum length 2.5M


* See specifications for use of trigger edge selection link

Title			FOUR COIL SEQUENTIAL IGNITION		
Size	Number	Revision			
A4	PRO-14b S3	1.2			
Date:	12-Sep-2010	Sheet 1 of	1		
File:	D:\M&W\...\Pro14b_S3_3.sch	Drawn By:	M&W		

M & W IGNITIONS

Performance & Quality since 1996

CAUTION!
HIGH VOLTAGE

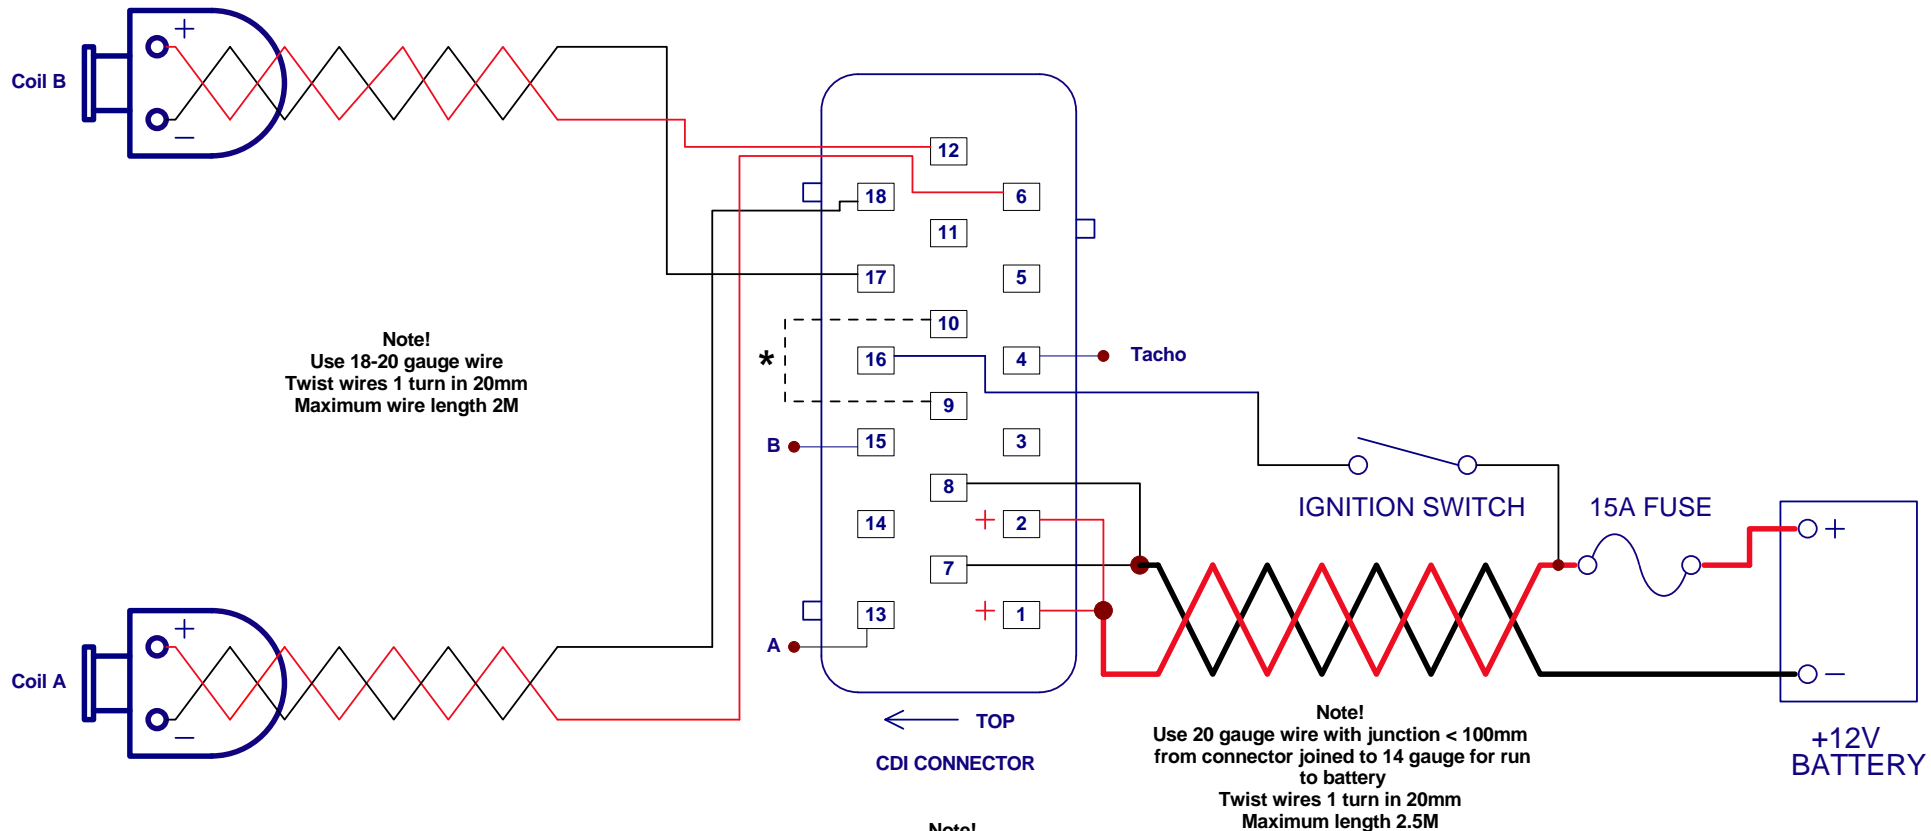

Note!
 Input 'A' and Input 'B' may be joined
 where only one ignition trigger is
 available

* See instructions for use of trigger edge selection link

Title		
PORSCHE TWIN PLUG HEAD		
Size	Number	Revision
A4	PRO-14b S3	1.2
Date:	12-Sep-2010	Sheet 1 of 1
File:	D:\M&W\...\Pro14b_S3_4.sch	Drawn By:


M & W IGNITIONS

Performance & Quality since 1996

CAUTION!
HIGH VOLTAGE



**DISCONNECT POWER BEFORE
WORKING ON UNIT**

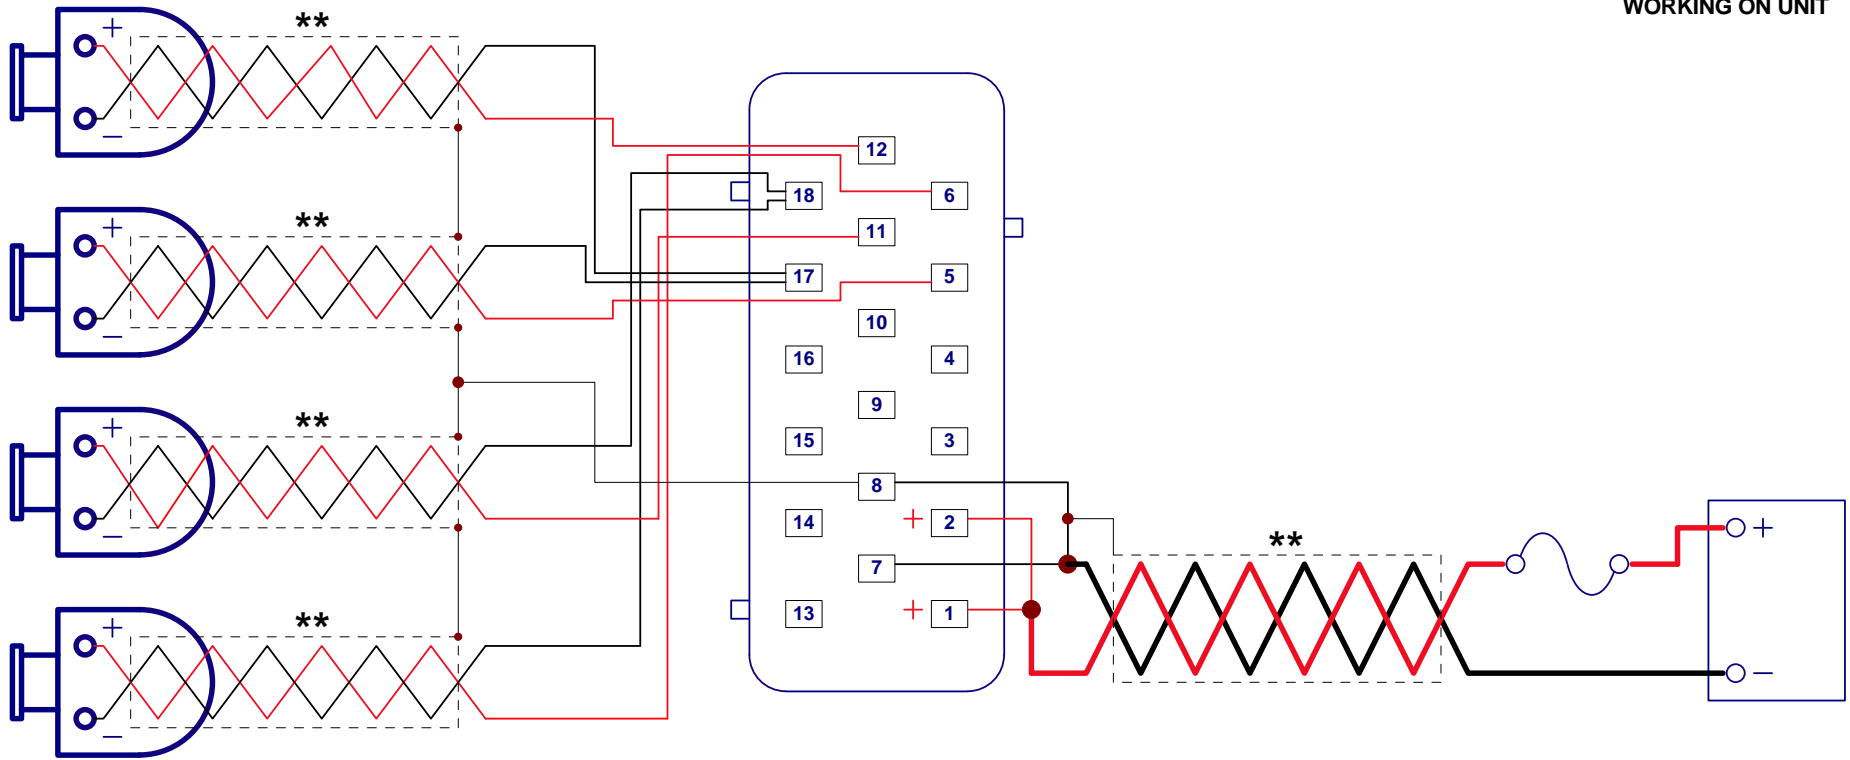

**** Shielded cables required for Australian EMC compliance**

Title			AUSTRALIAN EMC REQUIREMENTS		
Size	Number	Revision			
A4	PRO-14b S3	1.2			
Date:	12-Sep-2010	Sheet 1 of 1			
File:	D:\M&W\Diagrams\Pro-14b S3\EMC.sch	Drawn By:		M&W	