



Pro-16c

115/150mJ S3
Autronic Multiplex

ELECTRICAL WIRING & OPERATING INSTRUCTIONS

Applicable
S/No's 48xxxx

**FAILURE TO FOLLOW INSTRUCTIONS
WILL VOID WARRANTY**

CONTENTS:

2. Installation notes
6. Connections and specifications
7. 5 cylinder direct fire ignition
8. 6 cylinder direct fire ignition
9. Mounting dimensions

**ADDITIONAL RESOURCES & UP TO DATE
INSTRUCTIONS AVAILABLE FROM WEBSITE**

INSTALLATION NOTES

(Pro-Street Series 3 with Autronic Multiplex)

MOUNTING

Mount the unit in a dry location away from intense heat and ensure bottom condensation slots are unobstructed and oriented to permit gravity drain.

Failure to use supplied rubber mounts will void warranty!

IGNITION LEADS

Use inductively suppressed spiral wound metal conductor ignition leads.

Do not use carbon core or unsuppressed metal leads!

SPARK PLUGS

Non resistor spark plugs will greatly enhance ignition performance however some installations will require the use of resistor spark plugs for correct ECU operation.

When using resistor spark plugs it is imperative to check internal resistance as part of regular maintenance!

Open circuit or high resistance may cause damage to spark plug wires, ignition coils and CDI.

Fixed gap surface discharge and semi surface discharge spark plugs are only suitable for naturally aspirated applications.

Keep spark plug gap ≤ 0.025 " (0.6mm) for boosted motors to prevent coil and CDI damage!

INSULATION PRECAUTIONS

Degrease sparkplug insulators, sparkplug boots, ignition coil boots and installation tooling to prevent insulation breakdown.

Use of dielectric grease on sparkplug insulators and inside sparkplug and ignition coil boots will aid installation/removal and help prevent high voltage flashover.

POWER SUPPLY

Do not use voltage boosters, if the vehicle contains a PDM use it only to control CDI switch wire.

Connect ignition supply wires directly to battery!

When using a total loss electrical system install either a 16V or 18V battery to ensure adequate voltage and isolate when charging.

WIRING

If required power/ground wire length exceeds recommendations use paired battery cable (power and ground) to make up distance. Do not rely on vehicle chassis to provide ground path.

Use twisted pair wire for all power and coil connections. For improved noise suppression or to comply with EMC requirements use twisted shielded wire similar to M27500 series.

M&W CDI systems will open circuit the external fuse if over voltage conditions are experienced. Faults such as loose battery terminals/wiring or defective alternator/regulator may also cause this to occur.

Main connector pins are designed for roll crimping. Squeeze crimping or soldering will distort pins resulting in misfiring or incorrect CDI operation. Use of dielectric grease in main connector may reduce water ingress.

Common coil negative wires must be joined at or in the cdi connector.

Keep coil primary wires well separated from HT leads, coil HV outlet, coil body and any ECU wiring!

TRIGGERING

Autronic ECU multiplex trigger setup:

Go to 'Ignition setup' under menu M1 (Autronic config software)

Open 'Ignition O/P's' and select appropriate 'Mux' cyl configuration

Open 'Ign trigger edge' and select '-ve edge(PULSE)'

Open 'Dwell/pulse times' and select 'Autronic CDI SS'

Open 'Ign delay time' and set to 0 usec

Autronic multiplex CDI will not fire if ECU has not achieved sync with engine!

POWER LEVEL SWITCH

Do not manually activate this feature or operate continuously as this will significantly increase spark plug wear and system current draw. Activate by grounding input through either a 'Hobbs' style manifold pressure switch or programmable output from the ECU when elevated energy levels are required.

Additional ignition energy may cause an increase in electrical noise

TUNING

M&W CDI systems may reduce ignition delay requiring a reduction in timing. The resulting changes in combustion characteristics may also require alterations to fuel flow.

Always re-tune both fuel and timing curves after installation!

TACHO OUTPUT

Tacho output provides a 50% duty cycle square wave signal approximately 1V below supply voltage. This will work with most aftermarket digital tacho's however some earlier types and those designed for coil negative triggering may not read accurately and require an adaptor.

LED INDICATOR

After applying power to input switch wire the LED will illuminate for approximately 1 second then extinguish. It will then flash briefly with each consecutive trigger event received.

A repeated double flash of the LED may indicate a possible faulty ignition coil, faulty wiring, low supply voltage or damage to the CDI.

TESTING

The cdi may be fired by momentarily grounding trigger inputs however due to the multiplex trigger scheme used it may be necessary to consult Autronic documentation to ascertain which inputs or input pairs are used to fire the appropriate output.

Do not conduct this test without grounded spark plugs installed!

IGNITION COIL SELECTION

For ultimate ignition energy use coils specifically designed for CDI use such as the M&W #COI006. Ignition coils primarily designed for inductive ignition will significantly limit CDI output.

Wire inductive coils reverse polarity when used with M&W CDI's.

Do not use AEM pencil coils or Prufex brand ferrite coils under any circumstances!

COP COILS

Many COP (coil on plug) coils are unsuitable for CDI use and will break down damaging the ignition system. Some COP coils designed for inductive ignition may also contain a HV blocking diode in the secondary winding.

Use resistive sparkplugs with all COP coils and keep plug gap < 0.020" (0.5mm) to prevent coil & ignition damage.

FERRITE CDI COILS

Ferrite core cdi coils emit high levels of EMI requiring additional shielding practices and are unsuitable for use with alcohol based fuels.

Do not use ferrite coils wired in parallel pairs!

M & W IGNITIONS

Performance & Quality

CAUTION!
HIGH VOLTAGE



DISCONNECT POWER BEFORE
WORKING ON UNIT

VIEWED FROM BACK OF CONNECTOR



SPECIFICATIONS

Operating voltage	12.5V --> 18V DC
Polarity	Negative ground
Startup voltage	>= 6V
Maximum supply current	7.0A
Power off current	< 700uA
Maximum ignition frequency	1,200Hz
Energy limit:	
Std power	780Hz
Hi power	580Hz
Coil primary voltage:	
Standard power	480V
Hi power	550V
Spark energy:	
Standard power	115mJ
Std power	150mJ
Trigger	Autronic Mux
Tacho output:	
Voltage	Supply - 1.2V
Output current	100mA
Shape	Square wave
Operating temperature	<= 105°C
Dimensions	152L * 110W * 40H
Weight	740gm

**** 5 CYLINDER CONNECTIONS**
*** SM4 PIN NUMBERS**

1 +12V (Battery)	13 Ground (Battery)	25 IGNITION 2 (*6)
2 +12V (Battery)	14 Ground (Battery)	26 Ignition switch
3 IGNITION 1 (*5)	15	27
4	16 IGNITION 3 (*19)	28
5 Power Level (P)	17	29 IGNITION 4 (*33)
6 Tacho (T)	18	30
7	19	31
8	20	32
9	21	33
10 Coil 5 (**4) +	22 Coil -	34 Coil 6 (**5) +
11 Coil 3 (**3) +	23 Coil -	35 Coil 4 (** N/C) +
12 Coil 1 (**1) +	24 Coil -	36 Coil 2 (**2) +

Title PRO-16c AUTRONIC MULTIPLEX CDI		
Size A4	Number (C) M&W Ignitions	Revision 10.07.19.1
Date: 10-Jul-2019	Sheet 1 of 1	Drawn By: WAG
File: D:\M&W\...\Pro16C_S3_1.sch		

M & W IGNITIONS

Performance & Quality

CAUTION!
HIGH VOLTAGE

DISCONNECT POWER BEFORE WORKING ON UNIT



Wire Specifications

POWER SUPPLY:
Use 14ga wire from battery bifurcated into 20ga wire <= 100mm from connector.
Junction is best achieved using a Solistrand or similar butt splice / barrel crimp.
Maximum recommended wire length is 2M

IGNITION COILS:
Use 20ga wire from cdi to coils and keep as one continuous length.
Maximum recommended wire length is 2M

Read installation guide for important wiring details!

BATTERY

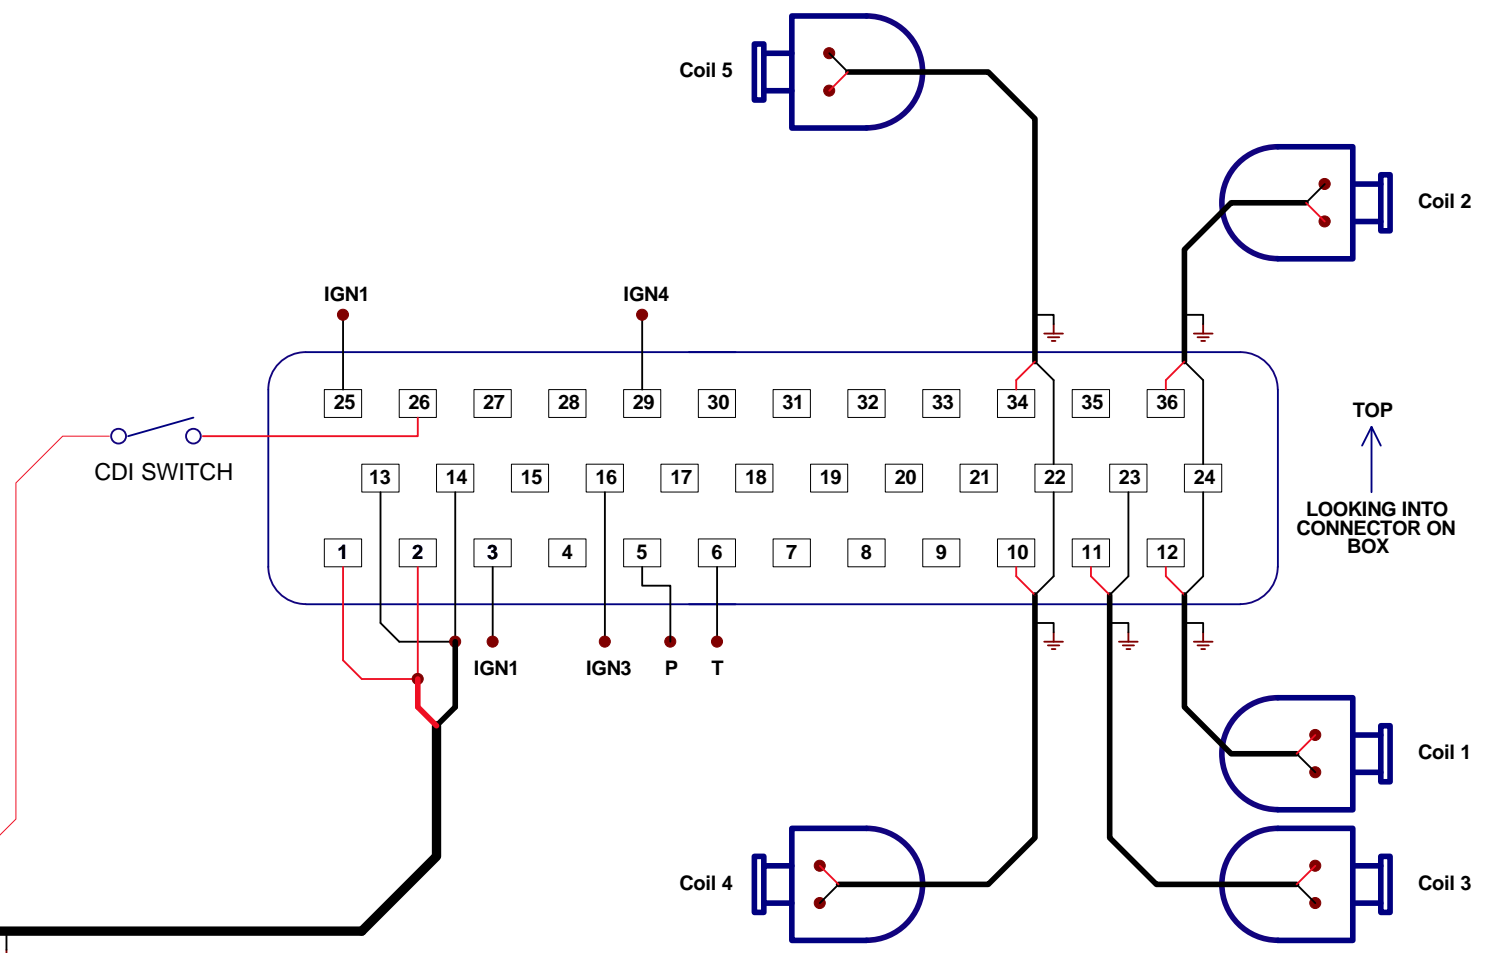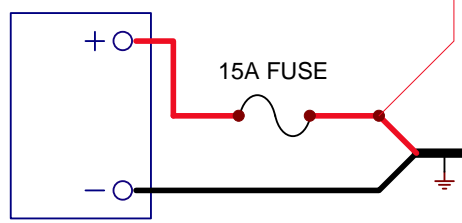

TOP
↑
LOOKING INTO CONNECTOR ON BOX

Title			PRO-16c 5 CHANNEL SEQUENTIAL		
Size	Number		Revision		
A4	(C) M&W Ignitions		10.07.19.1		
Date:	10-Jul-2019		Sheet 1 of 1		
File:	D:\M&W\...\Pro16C_S3_2.sch		Drawn By: WAG		

M & W IGNITIONS

Performance & Quality

CAUTION!
HIGH VOLTAGE

DISCONNECT POWER BEFORE WORKING ON UNIT



Wire Specifications

POWER SUPPLY:
Use 14ga wire from battery bifurcated into 20ga wire <= 100mm from connector. Junction is best achieved using a Solistrand or similar butt splice / barrel crimp. Maximum recommended wire length is 2M

IGNITION COILS:
Use 20ga wire from cdi to coils and keep as one continuous length. Maximum recommended wire length is 2M


Read installation guide for important wiring details!

BATTERY

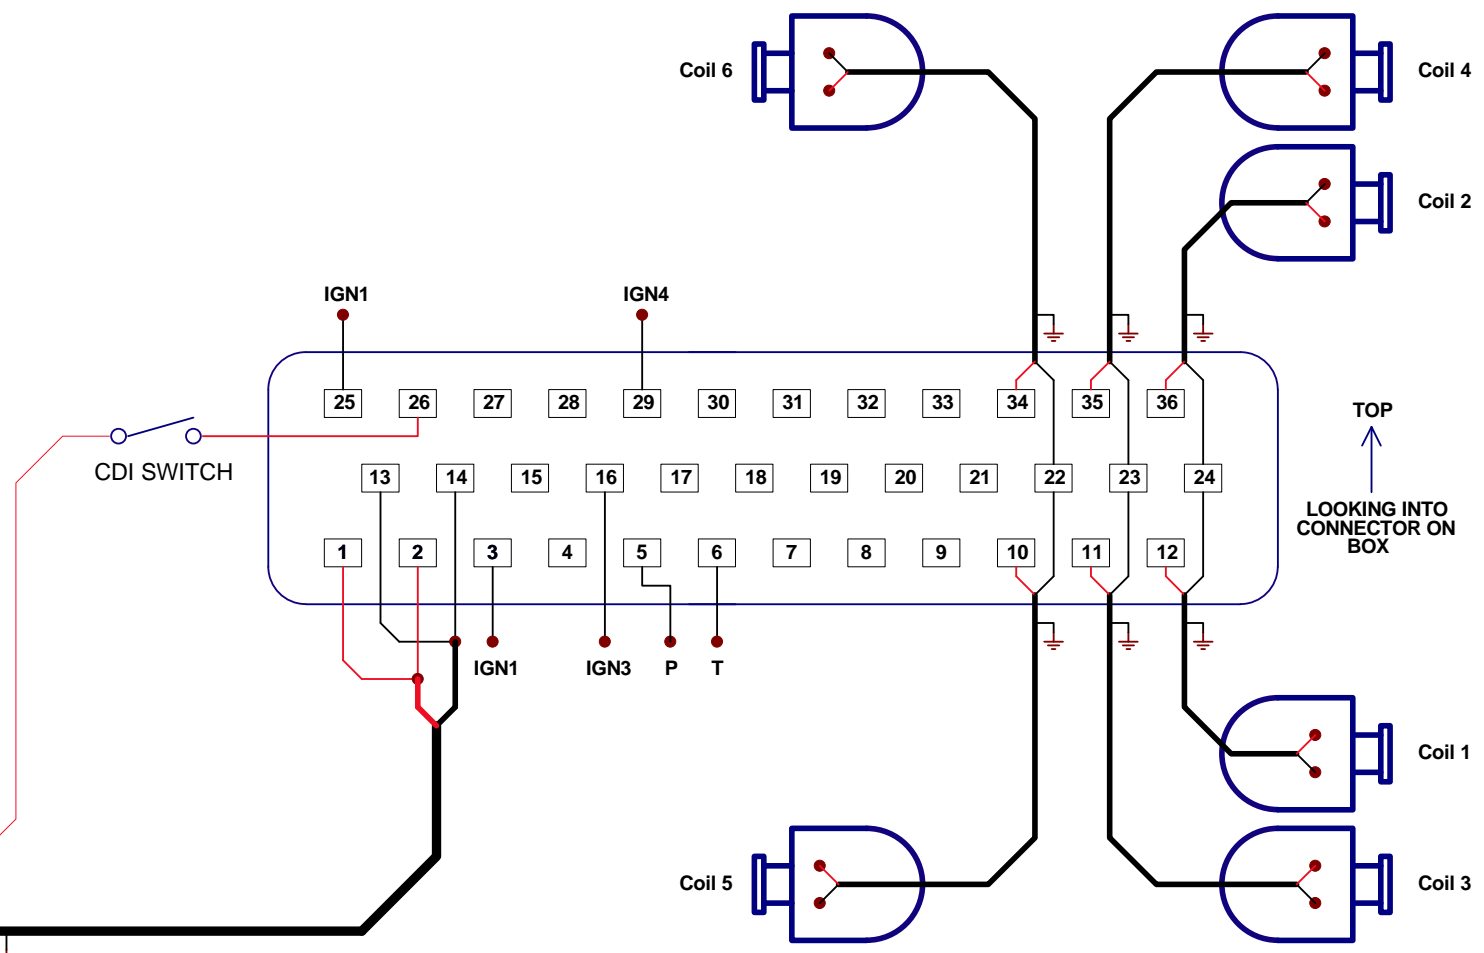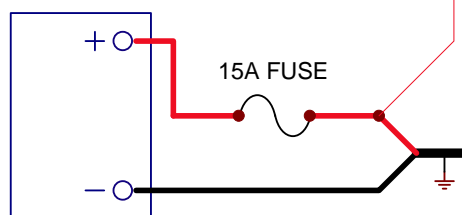

TOP
↑
LOOKING INTO CONNECTOR ON BOX

Title		
PRO-16c 6 CHANNEL SEQUENTIAL		
Size	Number	Revision
A4	(C) M&W Ignitions	10.07.19.1
Date:	10-Jul-2019	Sheet 1 of 1
File:	D:\M&W\...\Pro16C_S3_3.sch	Drawn By: WAG

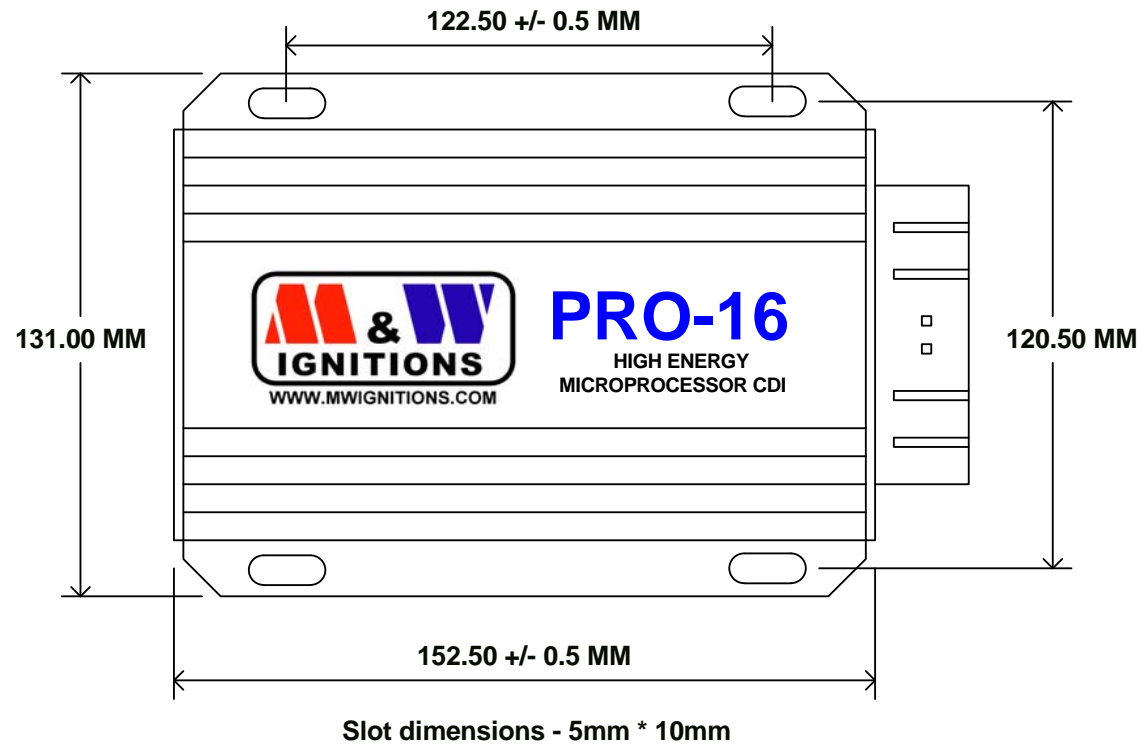

Title				MOUNTING DIMENSIONS	
Size	Number	Revision			
A4	(C) M&W Ignitions	10.07.19.1			
Date:	10-Jul-2019	Sheet 1 of	1		
File:	D:\M&W\...\Mounting dimensions.sch	Drawn By:	M&W		